

Digital Security Safe

OPERATING INSTRUCTIONS

1. OPENING THE SAFE

a. Key in the input code (the original code set by factory is 1,5,9), then press "A" or "B" button. The green light will come on. Turn the knob within 5 seconds and open the safe.

b. The yellow light will flash with a short beep sound, every time a button is pushed, this indicates confirmation. If the yellow light is flashing continuously together with a beep sound, this means that the input code is incorrect. A 20 second block will occur if you insert the incorrect code 3 times in a row. A further 3 incorrect input codes will result in a 5 minute block.

2. CLOSING THE SAFE

Close the door and turn the knob anti-clockwise.

3. TO SET AND CHANGE THE INPUT CODE

Push the red button behind the door while the door is open. The yellow light will come on with a short beep. Enter the new input code within 30 seconds (3-8 digits) and push "A" or "B" to confirm.

4. HOW TO USE YOUR OVERRIDE KEYS

If you have forgotten your code then remove the override cover besides the knob. Insert the override key and turn it and the door will open.

Do not leave the override key in the safe.

*** Store it in a safe place.**

5. WHEN TO CHANGE THE BATTERIES

If the red and green light are on together whilst you are opening the safe, this means that the batteries need replacing. Insert new batteries and test by pushing any button ie beep sound before closing the door.

