

TOMBER®

QUALITY
GUARANTEE

User manual

Käyttöohje / Bruksanvisning



8501/ST64
1012 8329

Exterior siding nailer (18-64 mm)

Ulkovuorausnailain /
Spikpistol



» Read the instruction manual carefully before using the appliance and follow all given instructions. Save the instructions for further reference.

» Lue käyttöohjeet huolellisesti ennen laitteen käyttöä ja noudata kaikkia annettuja ohjeita. Säilytä ohjeet myöhempää tarvetta varten.

» Läs noggrant igenom bruksanvisningen innan du använder apparaten och följ alla angivna instruktioner. Spara instruktionerna för senare behov.

Contents

Important	3
Explanation of Warnings	3
Safety	
Important Safety Instructions	4
User Responsibilities	6
Operation	
Technical Data	7
Selecting the Nails	7
Before Use	8
Work Environment	8
Air Compressor	8
Lubrication	9
Use in Cold Conditions	9
Function Test	9
Adjusting the Pressure	11
Loading the Nails	11
Removing the Nails	12
Exhaust Air Guide	12
Adjusting the Nailing Depth	13
Using the Nailer	13
Maintenance	
Maintenance and Inspection	14
Maintenance and Repair	15
Troubleshooting	16
Explosion Diagram	16
Parts List	17
Environmental Protection	17
Manufactured for	17

Important

READ THESE INSTRUCTIONS CAREFULLY, BECAUSE INCORRECT USE OR OPERATING A DAMAGED TOOL MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE.

Nailers are manufactured with care and equipped with a safety mechanism to prevent accidental firing, but in general, using, maintaining and servicing nailers requires caution and following the instructions to prevent accidents. Nailers may cause injury in cases of accidental discharge.

Use the lowest possible pressure at which the nailer operates properly. Excessive pressure causes unnecessary wear on the tool. Connect the nailer to the compressor using approved quick connectors, water separators and proper lubrication equipment. Do not attach a quick connector nipple to the nailer.

READ AND UNDERSTAND ALL NAILER OPERATING INSTRUCTIONS, SAFETY PRECAUTIONS AND WARNINGS MENTIONED IN THIS MANUAL.

Most accidents involving framing nailers are caused by failure to follow basic safety precautions. Accidents are most often avoidable by considering potential hazards in advance and by using the tool safely at all times.

Basic safety precautions are described in the “SAFETY” section of this manual and in the instructions regarding use and maintenance of the nailer.

Risk factors that may cause personal injury or machine damage are described in the DANGER and WARNING sections of this manual.

Too low pressure reduces performance.

Too high pressure increases rapid wear and may cause tool malfunctions!

Do not use the nailer for any purpose other than its intended use.

Explanation of Warnings

 **DANGER!**

Indicates an immediate hazard which, if not avoided, will result in serious injury.

 **WARNING!**

Indicates a potential hazard which, if not avoided, could result in serious injury.

 **CAUTION!**

Indicates a potential hazard which, if not avoided, may result in minor injury or damage to the tool.

 **NOTE!**

Contains important information.

Safety



1.



ALWAYS WEAR SAFETY GLASSES.


When using the nailer, always wear safety glasses and ensure that people nearby have protected their eyes. Use safety glasses that shield the eyes from the front and from the sides.

2.



DO NOT USE THE NAILER WHEN TIRED, OR UNDER THE INFLUENCE OF ALCOHOL OR ANY INTOXICATING SUBSTANCES.


3.

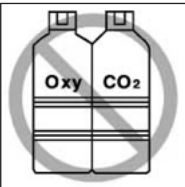

DO NOT USE BOTTLED GASES AS A POWER SOURCE.

Do not use gases as an energy source for the nailer! Flammable gases and oxygen may cause the tool to explode. Use only clean, dry compressed air.

4.

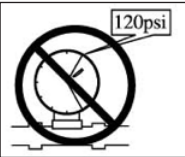

DO NOT EXCEED MAX PRESSURE OF 9 BAR.

Do not exceed the maximum pressure (9 bar). Never connect the nailer to an air source exceeding 13.7 bar, as the tool may explode.

5. DO NOT POINT THE NAILER AT OTHERS OR YOURSELF.

Be aware that the nailer may contain staples. Do not point the nailer at yourself or others even if the magazine appears empty. Even when the magazine looks empty, 1–2 staples may remain hidden in the feed mechanism.

6. DO NOT CARRY THE NAILER WITH THE TRIGGER PRESSED.

Remove your finger from the trigger when not firing. Do not carry the nailer with the trigger pressed, as hitting the safety contact or catching the tool on something may cause it to fire unexpectedly, posing a serious hazard. Carry the nailer only by its handle.

7. STORE THE NAILER PROPERLY.

Store the nailer in a dry, locked location. Keep it out of reach of children.

8. KEEP THE WORK AREA CLEAN.

Remove unnecessary tools, furniture, and objects from the work area. Tripping hazards can create dangerous situations.

9. DO NOT USE NEAR FLAMMABLE LIQUIDS OR GASES.

The nailer may generate sparks during use. Sparks can cause fire or explosion if flammable liquids or gases are nearby.

10. KEEP BYSTANDERS AWAY.

Unnecessary people nearby may be injured by flying debris or nails.

11. PROTECTIVE CLOTHING

Do not wear loose clothing or jewelry, as they can get caught in moving parts. Protect long hair with appropriate safety clothing.

Turvallisuus



12. **DO NOT CONNECT THE QUICK-COUPLER BODY TO THE NAILER**
The quick-coupler body (female part) contains a valve that prevents air from escaping. If you disconnect the hose from the nailer, the hose may remain pressurized even if it appears harmless.
13. **DO NOT REMOVE THE SAFETY DEVICE OR PRESS IT ARTIFICIALLY.**
When firing, the safety device must be pressed against the workpiece. Do not press it with your hand, tools, or in any artificial way, even in tight spaces.
14. **CHECK THAT ALL SCREWS AND PROTECTIVE COVERS ARE SECURE**
Make sure all screws and guards are properly tightened. Do not use the nailer if screws or protective parts are loose.
DO NOT PRESS THE TRIGGER OR SAFETY DEVICE WHILE LOADING NAILS.
When loading the nailer or connecting it to the air hose:
 1. Do not press the trigger
 2. Do not press the safety device
 3. Keep the nose of the nailer pointed downward
15. **KEEP HANDS AND FEET AWAY FROM THE NOSE AREA**
A fastener may fire in an unexpected direction and cause serious injury.
16. **BEWARE OF HAZARDOUS SITUATIONS.**
When fastening thin boards where the nailing point does not align with the framing behind it, the fastener can shoot through the board. If it hits another nail head or the edge of the wood, it may change direction unexpectedly and exit from the side of the wood. Keep your free hand and fingers well away from the nailing point.
17. **AVOID DOUBLE FIRING**
To avoid double firing:
 1. Do not press the nailer too hard against the surface
 2. Lift the nailer after each shot before firing again
 3. Pull and release the trigger after each shot
18. **DO NOT NAIL THIN BOARDS OR NEAR CORNERS.**
Nails may pass through the board or change direction, posing a risk of injury to you or others.
19. **DO NOT NAIL TOWARD ANOTHER PERSON**
A fastener may pass through a wall and strike someone on the opposite side.
20. **DO NOT NAIL INTO ELECTRICAL LINES**
To avoid electric shock, check for electrical wiring in walls or floors before nailing. If unsure, turn off the main power switch.
21. **DO NOT CARRY THE NAILER BY THE HOSE**
22. **WORKING POSITION**
Ensure you stand firmly. Avoid losing balance.
23. **DO NOT USE A MALFUNCTIONING NAILER**
If the nailer makes unusual noises or does not operate normally, stop using it immediately and have it inspected by an authorized service center.
24. **DO NOT DISCONNECT THE NAILER FROM THE HOSE WHILE THE TRIGGER IS PRESSED**
A nail may be discharged from the nailer if it is disconnected from the hose while the trigger is pressed.

Safety



24. DO NOT DISCONNECT THE NAILER FROM THE HOSE WHILE THE TRIGGER IS PRESSED

A staple or nail may be ejected if the nailer is disconnected from the hose while the trigger is pressed.

25. DISCONNECT THE HOSE FROM THE NAILER:

1. For maintenance and inspection;
2. When removing a jammed nail;
3. When the tool is not in use;
4. When leaving the work area;
5. When transporting to another location

Do not repair or open the nailer before removing all nails from the magazine and disconnecting the hose.

26. WORKING

Do not work when tired or under the influence of alcohol or other intoxicating substances.

27. PROPER USE

Use the nailer only according to these instructions. Do not allow children or persons unfamiliar with these instructions and safety guidelines to use the nailer.

28. HANDLE THE NAILER CAREFULLY

Do not stamp or engrave anything onto the nailer's pressure body.
Do not drop the nailer, as the pressure body may crack.

29. REGULAR MAINTENANCE

Keep the nailer clean and lubricate it regularly.

30. USE ONLY NAILS, SPARE PARTS AND ACCESSORIES INTENDED FOR THIS NAILER

Unsuitable parts and staples may cause serious hazards and void the warranty. Only authorized service centers may carry out repairs.
Do not modify the nailer in any way.

User Responsibilities

1. Ensure that this manual is provided with the nailer and that all users read and understand it before use.
2. Ensure that the operator and those working nearby use appropriate protective equipment.
3. Do not allow the nailer to be used without eye protection.
4. Keep the nailer in good working condition.
5. Maintain the nailer regularly.
6. Ensure the nailer is not used when faulty, damaged, or lacking proper equipment.

KEEP THIS MANUAL AND MAKE IT AVAILABLE TO ALL USERS!




Use

Technical Data

Malli	8501
Paino	2,68 kg / 5,91 lbs
Lipaskapasiteetti	80 nails
Käyttöpaine	4 - 7 bar (60-100 psi)
Max. paine	8 bar (120 psi)
Pituus x korkeus x leveys	330 x 310 x 115 mm
Äänenvoimakkuusarvo LpA EN 792-13 :2000+A1 :2008	89.0 dB(A)
Äänenvoimakkuusarvo LwA EN 792-13 :2000+A1 :2008	102.0 dB(A)
Tärinäarvo (m/s ²)	5.29 m/s ²

Nail Selection

Only the nails listed in the table may be used with this nailer.

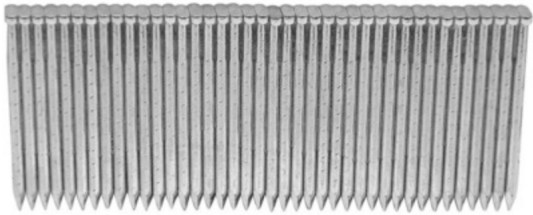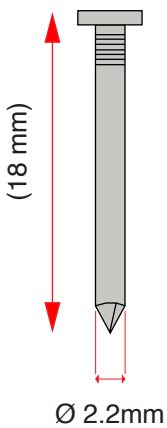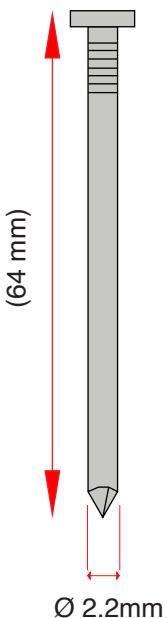Ulkovuorinaula	Min.	Max.
	 <p>(18 mm)</p> <p>Ø 2.2mm</p>	 <p>(64 mm)</p> <p>Ø 2.2mm</p>

Before Use

DANGER!

Read the “SAFETY” section (pages 4–6).

Make sure you follow the items below before operating the tool.

WORKING ENVIRONMENT

WARNING!

- The workplace must be free of flammable gases, liquids, or other potentially explosive materials.
- No children or unauthorized persons are allowed in the working area.

AIR SUPPLY



- DO NOT USE OXYGEN OR BOTTLED GASES AS A POWER SOURCE.

WARNING!

- DO NOT CONNECT THE NAILER TO AN AIR SOURCE ABOVE 14 BAR.
- NEVER USE A PRESSURE REGULATOR (EQUALIZER) ON THE TOOL ITSELF.

1. Air source

Use only clean, dry compressed air.

2. Compressor

A compressor with a maximum pressure of 10 bar and a starting pressure of approximately 8 bar is recommended for the nailer. This ensures that the tank pressure provides maximum driving force for the tool even at the lowest levels. The air output requirement of the compressor depends on the nailing speed, but a practical minimum value is 10 l/min. The recommended compressor size for one nailer is a 1.5 kW compressor with an output of approximately 170 l/min and a maximum pressure of 10 bar. If a second nailer is to be used simultaneously, a compressor with 2.2 kW power and an output of approximately 230 l/min is recommended. The compressor must be equipped with a pressure regulator, and it is also advisable that it includes a water separator and a filter.

3. Air hose

The air hose must have a sufficiently large internal diameter to avoid excessive flow resistance. A minimum recommended size is a hose with an internal diameter of 10 mm, which is suitable for hose lengths up to approximately 10 m. If a longer hose is required and the working hose closest to the tool should be kept as light as possible, it is recommended that the first 10 m has an internal diameter of 12 mm. In cold conditions, rubber hoses are more flexible, while fabric-reinforced PVC hoses are lighter and more pleasant to use indoors. Ensure that the hose you are using is sufficiently pressure-rated. If the compressor is equipped with a mist oiler, the inside surface of the hose must also be resistant to lubricating oil.

Lubrication

For proper and safe operation, the nailer requires lubrication. The internal parts of the nailer—such as the piston and valve—need continuous lubrication, which is best achieved by installing a mist lubricator in the compressed air system. If no mist lubricator is available, you can spray lubrication oil periodically into the air inlets of the nailer. Remember to do this also at the end of the work, because moisture in the air condenses into droplets and causes extra corrosion and wear. In cold conditions the moisture may naturally freeze inside the valve and prevent the safety mechanism from working. Fire a few nails after lubrication.

DO NOT USE SYNTHETIC LUBRICATING OILS THAT MAY SWELL THE SEALS!

In a lubricator, use SAE10 pneumatic motor oil, adjusted to 2 drops per minute.

External parts: Also lubricate the feed piston and its sliding surfaces in the magazine, as well as the sliding points of the safety mechanism.

Operation in cold weather

- Never heat the nailer with an open flame. Allow it to warm up slowly.
- When starting work with a cold nailer, first perform the following actions: Remove the staples from the magazine and reduce the air pressure to approx. 2 bar. Fire several shots without staples so that the piston seal and bumper warm up and gradually soften, preventing damage.

⚠ CAUTION!

- **DO NOT FIRE THE NAILER AT FULL PRESSURE WITHOUT STAPLES.**

Testing the nailer



- ALWAYS WEAR SAFETY GLASSES

⚠ DANGER!


- Do not use the nailer if the safety mechanism does not function. Test the nailer before use according to the following points. If the nailer does not operate normally, stop using it immediately.

1. DISCONNECT THE AIR HOSE FROM THE NAILER AND REMOVE ALL STAPLES FROM THE MAGAZINE


- » CHECK SCREW TIGHTNESS
If any screws are loose, tighten them.
- » The safety mechanism and trigger must move smoothly.




Nailer Testing

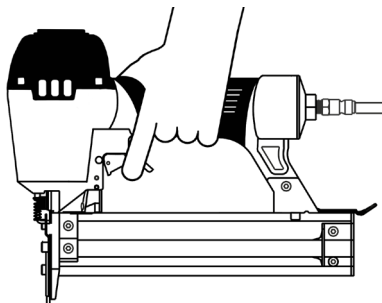

2. **Adjust the compressor pressure to approx. 5 bar.
Connect the air hose to the nailer.
Do not load nails into the magazine.**
 - » The nailer must not leak air from anywhere.
 - » Hold the nailer in the air (the safety tip not touching the work surface) and pull the trigger.
 - » The nailer must not fire.

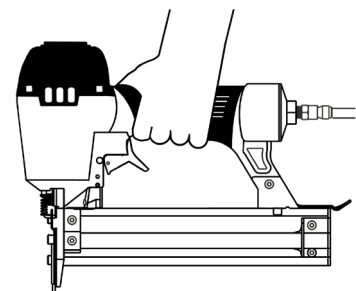

3. **Remove your finger from the trigger and press the safety tip against the work surface.**
 - » The nailer must not fire.

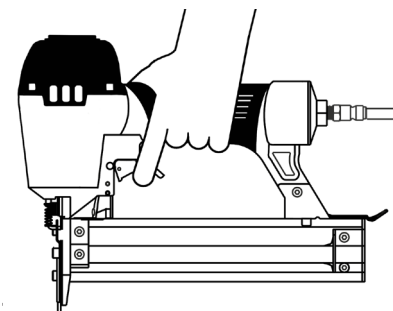

4. **Without touching the trigger, press the safety tip against the work surface and then pull the trigger.**
 - » The NAILER SHOULD FIRE.
5. **Lift the safety tip away from the work surface while keeping the trigger pulled. Then press the safety tip against the work surface again.**
 - » The NAILER SHOULD FIRE.
6. **If checks 1–5 work correctly, load nails into the magazine and test on a piece of scrap material similar to the actual workpiece.**
 - » The NAILER SHOULD OPERATE NORMALLY.

Adjusting the Pressure

⚠ WARNING!



- Do not exceed the maximum pressure of 9 bar.

Adjust the working pressure to 5–8.3 bar depending on the nails being used and the hardness of the workpiece. If the nail head sinks too deep, reduce the pressure. If the pressure is set too low, feeding problems may occur because the pressure is not sufficient to raise the piston to its upper position, and the driver may block nail advancement.

Loading Nails


⚠ WARNING!

When loading the magazine with nails:

1. Do not press the trigger.
2. Do not press the safety tip.
3. Always keep the nailer pointed downward and away from targets.


Loading:

(1) Load the nail strip into the side of the magazine. Do not load with the trigger or safety tip pressed. Open the magazine using the release button (see image).

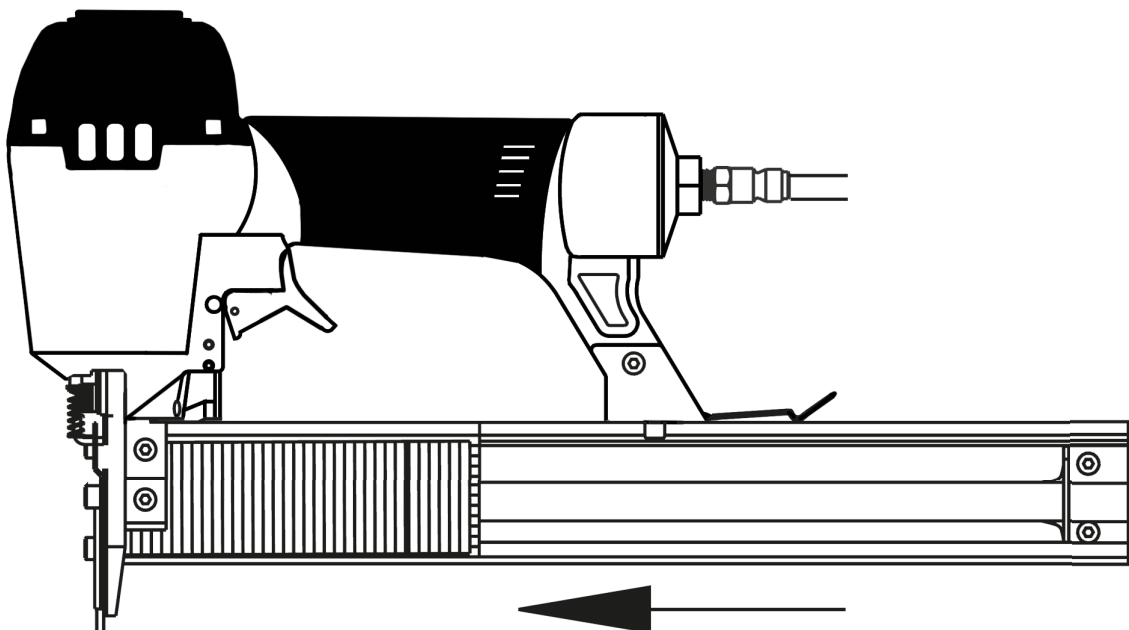

Removing Nails

Press the release button and pull slightly backward to open the magazine.
Remove the nails from the magazine.

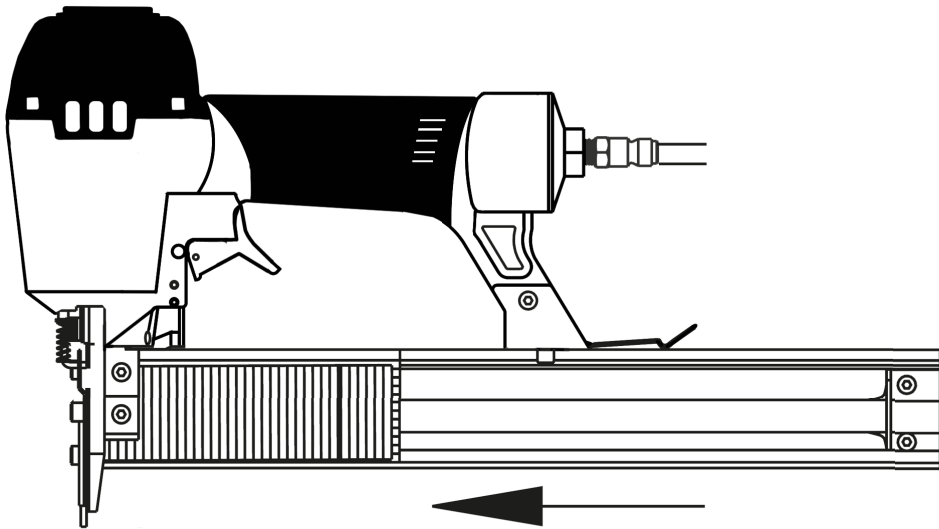

NOTE!

Make sure there are at least 5 nails in the nail strip when loading the magazine.
The nailer will stop operating if there are fewer than three nails left in the magazine.
By adding more nails, it will start working again.

Exhaust Direction Adjustment

The exhaust port can be rotated to any desired position (360 degrees).
Adjust the exhaust direction by turning it.



Using the Nailer

Read the section “SAFETY” before use (pages 4–6).

⚠ DANGER!



Always wear safety glasses!

⚠ WARNING!

- Do not point the nailer at yourself or others.
- Do not carry the nailer with your finger on the trigger.
- Keep your fingers and feet away from the nailing area.
- Do not fire onto another staple or nail; the fastener may change direction.
- To avoid double firing:
 1. Do not press the nailer too firmly against the workpiece.
 2. Lift the nailer after the shot is fired.
 3. Release the trigger quickly after firing.
- Do not nail thin boards or near corners.
- Nails may pass through the workpiece or change direction and injure others.
- Do not nail into a wall if there are people on the other side.
- Do not use the nailer if it is damaged or functioning abnormally.
- Do not use the nailer as a hammer.
- Disconnect the air hose from the nailer when:
 1. it is not in use
 2. you leave the work area
 3. you move the nailer
 4. you hand it to another person

Using the Nailer

OPERATION OF THE NAILER

The nailer is equipped with a safety device that must be released before the nailer will operate (pressed against the work surface).

1. Sequential nailing (trigger firing):
 - Place the contact tip / safety device against the workpiece with your finger off the trigger.
 - Press the nailer gently against the workpiece so the safety device is released.
 - Pull the trigger.
 - Release the trigger.

To fire the next staple, lift the nailer away from the workpiece and repeat the steps above.

CAUTION!

Handle staples and staple strips carefully. Damaged strips may not feed correctly in the magazine.

After finishing work

1. Disconnect the air hose from the nailer.
2. Remove all staples from the magazine.
3. Add 2–3 drops of pneumatic oil through the air inlet.
4. Drain condensate water from the compressor tank by opening the compressor drain valve.

Maintenance

NOTE: The nailer must be inspected daily and always after transport or being dropped.

READ THE SAFETY SECTION (PAGES 4–6)

WARNING!

Disconnect the air hose from the nailer and remove the staples from the magazine when:

1. performing maintenance or inspection; or
2. clearing a jam.

1. Magazine inspection

- Disconnect the air hose.
- Clean the magazine. Remove any wood debris and plastic pieces. Lubricate the magazine.

CAUTION!

- Check that the feeder button slides smoothly.
- If the button does not slide, lubricate it.

Check that the safety mechanism is not damaged. Remove staples from the magazine. Reduce the air pressure to 2 bar, point the nailer at a safe target, but do not press the safety device up. Pull the trigger. The nailer should not fire. If it fires, contact an authorized service center.

Maintenance

1. Check that the housing has no cracks or fractures.
2. Check that all screws are properly tightened.
3. Before starting any work, ensure that the compressor's air pressure regulator is correctly adjusted and, if a lubricator is used, that it contains oil.
4. If the system has a water separator, empty it.
5. Maintenance table (see p. 15.)
6. Troubleshooting (see p. 16.)

Maintenance and Repair

- Repairs to the nailer may only be performed by an authorized service center.
- Use only spare parts intended for this nailer.
- All nailers require periodic maintenance and repair due to natural wear.

NOTE:

We reserve the right to change these operating instructions without prior notice.

The manufacturer grants a 12-month warranty for the nailer, covering parts that have become defective due to manufacturing or material faults. The warranty does not cover labor or travel costs, nor indirect damages such as lost working time. Warranty validity requires that the nailer is maintained according to the instructions and that no modifications have been made by the user. Wear parts such as seals and the driver are not covered by the warranty. The customer is responsible for any inspection costs resulting from incorrect use or maintenance.

Maintenance Table


Procedure	Why?	How?
Empty the water separator (compressor)	Keeps compressed air clean and dry	Open the separator's drain valve
Keep the oiler filled (accessory)	Provides lubrication for the nailer	Fill with pneumatic tool oil
Clean the magazine and feed mechanism	Prevents feeding problems	Clean with compressed air
Check the safety mechanism operation	Ensures safety	Clean with compressed air
Lubricate the nailer after use	Extends service life	Apply 2–3 drops of oil to the air inlet
Drain compressor condensation	Prevents nailer corrosion and wear	Open compressor drain valve

Troubleshooting

Most faults can be identified using the table below. If the issue is not resolved, contact the importer / service center.

Problem	Check	Action
Tool fires but staples do not come out	Check for blockages	Remove blockages
	Check the feed mechanism	Clean and lubricate
	Feed spring worn or broken	Replace the spring
	Are the correct staples being used?	Use only the recommended staples
Staple does not sink deep enough or the driver does not return upward	Check air pressure	Increase pressure (not above 9 bar)
	-----	Lubricate the tool
	Driver worn out	Contact the importer
	Seals worn / damaged	
Stapless sink too deeply	Check air pressure	Reduce pressure
No stapless feeding / feed malfunction	Ensure correct staples are being used	Use only the correct size/type of staples
	Check feed mechanism operation (p. 14)	Clean and lubricate
	Feed spring damaged?	Replace the spring
	Piston O-ring worn / broken	Replace the O-ring
Stapless jam / stapless bend	Check if the driver is damaged	Replace the driver
Tool fires stapless slowly but not at high firing speed	Check air hose internal diameter / compressor output	Use a hose with a larger inner diameter or a compressor with higher output

Exploded Diagram

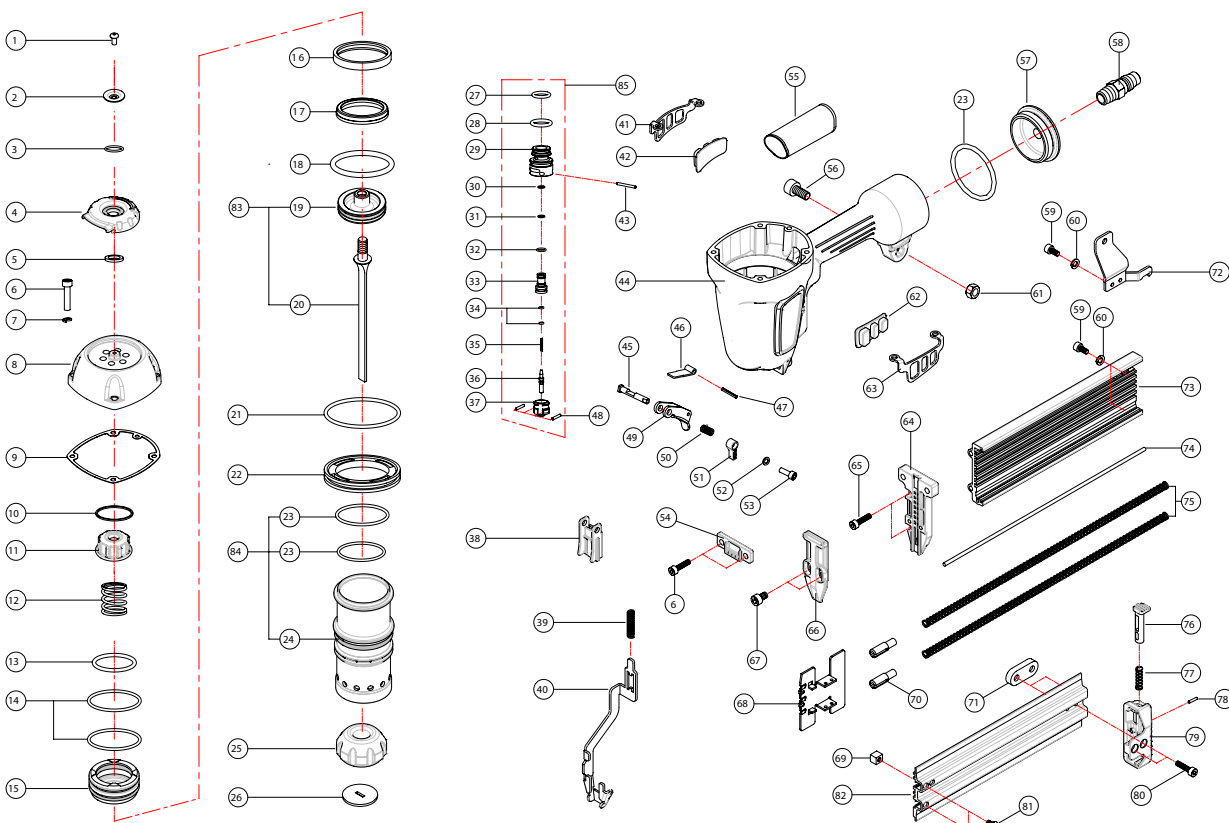

Parts List

ITEM NO.	PART NO.	DESCRIPTION	PCS	ITEM NO.	PART NO.	DESCRIPTION	PCS	ITEM NO.	PART NO.	DESCRIPTION	PCS
1	A.00.00.0181	Screw 5*16	1	30	A.02.00.0131	O- Ring 5.6*1.8	1	59	A.00.00.0021	Screw 4*10	4
2	A.00.05.0121	Washer	1	31	A.02.00.0961	O- Ring 6.4*1.6	1	60	A.00.05.0001	WASHER #4	4
3	A.02.00.0331	O- Ring 16*1.7	1	32	A.02.00.1171	O- Ring 8.2*1.75	1	61	A.00.04.0021	Nylon Nut (M6)	1
4	A.03.04.0131	Exhaust Cover	1	33	A.05.03.0121	Trigger Valve Guide	1	62	A.03.17.0071	Prevent fall frame (A)	1
5	A.00.05.0131	Washer	1	34	A.02.00.0031	O- Ring 2.3*1.4	2	63	A.03.17.0131	Prevent fall frame (A)	1
6	A.00.00.0291	Screw 6*30	6	35	A.01.00.0451	Spring	1	64	A.08.01.1081	Driver Guide	1
7	A.00.05.0021	Washer #6	4	36	A.05.04.0051	Trigger Valve Stem	1	65	A.00.00.0201	Screw 5*20	2
8	A.09.24.XXX1	Cylinder Cap	1	37	A.05.05.0021	Seal,Air	1	66	A.08.01.1071	Driver Guide Cover	1
9	A.02.05.0211	Gasket	1	38	A.07.12.0281	CATCH GUIDE PLATE	1	67	A.00.00.0161	Screw 5*12	2
10	A.03.13.0001	Washer	1	39	A.01.00.0501	Spring	1	68	A.07.07.0321	Pusher	1
11	A.03.13.0021	Piston Stopper	1	40	A.07.11.0621	Release Catch	1	69	A.07.19.0011	Stopper	2
12	A.01.00.0411	Compression Spring	1	41	A.03.17.0121	Prevent fall frame (B)	1	70	A.07.06.0031	Spring Holder	2
13	A.02.00.0701	O- Ring 40*2.65	1	42	A.03.17.0051	Prevent fall frame (B)	1	71	A.07.19.0211	Magazine Support Stopper	1
14	A.02.00.0871	O- Ring 56.7*2.9	2	43	A.00.11.0221	Spring Pin 3*30	1	72	A.07.06.0391	Magazine Support	1
15	A.03.08.0071	Head Valve Piston	1	44	A.04.28.XXX1	Body	1	73	A.07.01.0571	Lower M ag	1
16	A.03.13.0041	Washer	1	45	A.00.06.0231	Pin	1	74	A.07.08.0031	Steel Bar	1
17	A.03.13.0011	Seal,Air	1	46	A.05.01.0061	Releasing Blade	1	75	A.01.00.0041	Spring	2
18	A.02.00.0751	O- Ring 44.7*3.5	1	47	A.00.11.0161	Spring Pin 3*16	1	76	A.07.09.0171	Click Lever	1
19	A.06.02.0231	Piston Head	1	48	A.00.06.0011	Pin 3*14	2	77	A.01.00.0351	Spring	1
20	A.06.00.0681	Driver Blade	1	49	A.05.00.0111	Trigger	1	78	A.00.11.0221	Spring Pin 3*17	1
21	A.02.00.1191	O- Ring 80*2.65	1	50	A.01.00.0311	Spring	1	79	A.07.18.0221	Tail Cover	1
22	A.08.00.0371	Spacer	1	51	A.05.00.0151	Trigger Rotating wrench	1	80	A.00.00.0151	Screw 5*10	2
23	A.02.00.1201	O- Ring 54*3	3	52	A.00.05.0091	Washer	1	81	A.00.00.0351	Screw 4*8	1
24	A.03.03.0221	Cylinder	1	53	A.00.00.0011	Screw 4*8	1	82	A.07.00.0521	UPPER MAG	1
25	A.03.09.0181	Bumper	1	54	A.08.00.0361	Spacer	1	83	B.06.00.0601	Piston Set	1
26	A.03.10.0161	Nozzle	1	55	A.02.04.0031	Grip	1	84	B.03.03.0201	Cylinder Set	1
27	A.02.00.0941	O- Ring 16*1.8	1	56	A.00.00.0271	Screw 6*20	1	85	B.05.03.0051	Trigger Valve Set	1
28	A.02.00.0361	O- Ring 19*2.3	1	57	A.10.08.XXX1	Tail Cover	1				
29	A.05.03.0071	Trigger Valve Head	1	58	A.03.07.XXX1	Air Plug	1				

Environmental protection



This symbol indicates that this device must not be disposed of with household waste in any EU country. To avoid environmental and health hazards, the device must be recycled properly so that the materials can be reused as efficiently as possible. When you wish to dispose of the used device, use the appropriate recycling and collection services.

Manufactured for

Tamforce Group, Pakkalankuja 6, 01510 Vantaa, Finland
asiakaspalvelu@puuilo.fi

TOMBER®